

# QUATTRO GOLD ELECTRONIC TIMECLOCK


## PROGRAMMING THE TIMECLOCK

The Quattro Gold Electronic Timeclock is a 7 day timeswitch module with a storage capacity of 10 'ON' and 10 'OFF' programmable instructions. The unit incorporates a 10 amp (resistive) normally open voltage-free switch, LCD display, and 5 hour battery reserve. The timeswitch memory is 'pre-loaded' with an in-built program:

Mon / Fri ON 06:00 - OFF 22:00  
Sat / Sun ON 07:00 - OFF 23:00


**Before programming** - Operate recessed reset button (marked Res. on unit). The reset button clears the memory of unwanted information - this button is also used to clear interference which may occur from time to time. Resetting deletes all information except the in-built program.

**Autostart** - Press the  $\odot$  button once. The unit will automatically set the current day and time to MON 20:00. The in-built programme will be in operation, but does not show on the display. If you need to alter the current day/time display or the program, please follow the instructions, beginning at **1** above right.

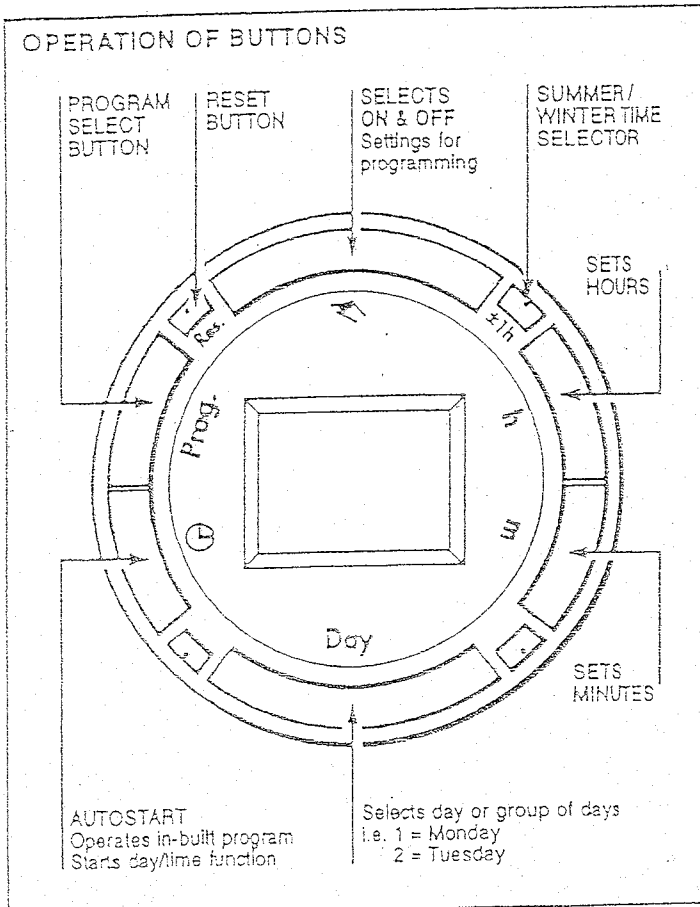

**1** Set current day and time - Press and hold in the  $\odot$  button. Use the Day button to set the day of the week i.e. No. 1 = Monday, No. 2 = Tuesday, etc.


Keeping the  $\odot$  button held in, set the hours and minutes using the h and m buttons. Release the  $\odot$  button.

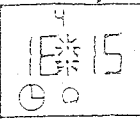


**2** To programme the ON and OFF times - Press and release the Prog. button.

**3** Now select the day or group of days for the first program using the Day button.

i.e. No. 1 = Monday.  
No's. 1 to 5 = Monday to Friday.  
No's 6 and 7 = Saturday & Sunday.

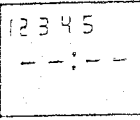


**4** Now select the ON start time using the h and m buttons. Then press the  $\rightarrow$  button once to select program ON which will be shown by the symbol  $\odot$ .

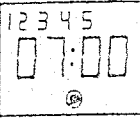

**5** Press the Prog. button to select the next program stage.

**6** Select the same day or group of days as the ON program.

**7** Now select the OFF time, using the h and m buttons. Then press the  $\rightarrow$  button twice, to select program OFF which will be shown by the symbol  $\circ$ .

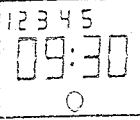

**8** Once again, press the Prog. button. Repeat instructions **2** to **7** for up to 10 ON and OFF programmed instructions. *Note: you do not have to use all the program spaces available.*

After programming return to the current time by pressing the  $\odot$  button.

**9** To review or amend the program - Press the Prog. button to view programmed information. Whilst displayed, days, hours and minutes can be changed by following the instructions above.

When all programs have been displayed the number of free programs still available can be shown by pressing the Prog. button twice, i.e. Fr:12.

**IMPORTANT:** On the initial set up it may be necessary to manually override the first program. This can be done by carrying out the method shown below.

**10** Advance/Manual Override - Press  $\rightarrow$  button once to switch ON ( $\odot$ ) or OFF ( $\circ$ ) early.

Press  $\rightarrow$  button twice to select constant ON  $\odot$ .  
Press  $\rightarrow$  button 3 times to select constant OFF  $\circ$ .  
Press  $\rightarrow$  button 4 times to return to timed function.

# HALSTEAD

4 First Avenue, Bluebridge Industrial Estate, Halstead, Essex CO9 2EX  
Tel: (01787) 475557 Fax: (01787) 474588

SERVICE HOTLINE (01203) 351424

Reinforced Plastic Buttons

Halstead Buttons are continuously improving their products and therefore reserves the right to change specifications without prior notice and accepts no liability for



With clock symbol at side = ON Timed



With clock symbol at side = OFF Timed




With hand symbol at side = ON Manual





With hand symbol at side = OFF Manual



= Constantly ON

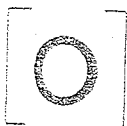

= Constantly OFF

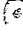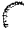If you are setting just 4 programmes i.e. 2 on's and 2 off's for 7 days, you need to display the Seven Days (1-7) and enter the desired time over pre-set time displayed before entering the next on or off desired times. On completion ensure that the correct  on or  off symbol is displayed appropriate to the actual time of day. The "hand" symbol will also appear, but will not show after the next time has switched.

If you are setting more than 4 programmes the above will still apply i.e. overwrite any built in programme displayed (there will only be 4) and thereafter insert the appropriate on or off symbol and then insert your desired time in the blank display, noting that you always have the appropriate Day Nos. displayed first.